

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

| Item                                      | When to initialize  | Reference |
|---|---|-----------|
| Power window                              | After reconnecting or changing the battery                            | P. 73     |
| Engine oil maintenance data (U.S.A. only) | After changing engine oil   | P. 386    |
| Tire pressure warning system              | When changing the tire inflation pressure by changing traveling speed | P. 397    |



